


## UP000 Silver Series

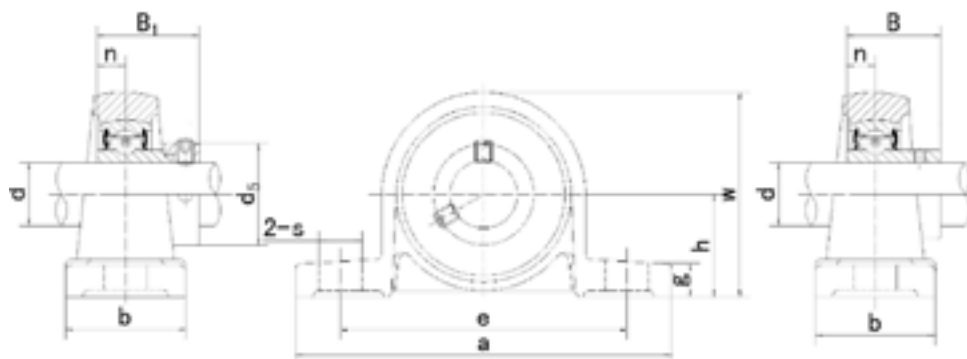

Part No.	Dimensions (mm)										Weight (g)	Bolt Size	Bearing No.	Housing No.
	d	h	a	e	b	s	g	w	B/Bi	n				
UP000	10	18	67	53	16	7	6	35	14	4	70	M6	U000	P000
UP001	12	19	71	56	16	7	6	38	14.5	4	90	M6	U001	P001
UP002	15	22	80	63	16	7	7	43	16.5	4.5	130	M6	U002	P002
UP003	17	24	85	67	18	7	7	47	17.5	5	160	M6	U003	P003
UP004	20	28	100	80	20	9	9	55	21	6	230	M8	U004	P004
UP005	25	32	112	90	20	10	10	62	22.5	6.5	290	M8	U005	P005
UP006	30	36	132	106	26	13	11	70	24.5	6.5	450	M10	U006	P006
UP000ER	10	18	67	53	16	7	6	35	17.5	4	80	M6	U000ER	P000

## UP000ER Silver Series

Part No.	Dimensions (mm)										Weight (g)	Bolt Size	Bearing No.	Housing No.
	d	h	a	e	b	s	g	w	B/Bi	n				
UP001ER	12	19	71	56	16	7	6	38	17.5	4	90	M6	U001ER	P001
UP002ER	15	22	80	63	16	7	7	43	18.5	4.5	130	M6	U002ER	P002
UP003ER	17	24	85	67	18	7	7	47	20.5	5	160	M6	U003ER	P003
UP004ER	20	28	100	80	20	9	9	55	24.4	6	230	M8	U004ER	P004
UP005ER	25	32	112	90	20	10	10	62	25.5	6.5	290	M8	U005ER	P005
UP006ER	30	36	132	106	26	13	11	70	26.5	6.5	450	M10	U006ER	P006

ER = Collar Type